



INSTALLATION INSTRUCTIONS FOR CONCEALED-MOUNT GRAB BARS

	Vertical	Horizontal	Diagonal
12"	✓	✗	✗
16"	✓	✓	✗
18"	✓	✓	↘ @ 27°
24"	✓	✗	↘ @ 48°
32"	✓	✗	↘ @ 60°
36"	✓	✗	↘ @ 64°

*Chart is based on 16" centre to centre 1-1/2" width wood wall studs

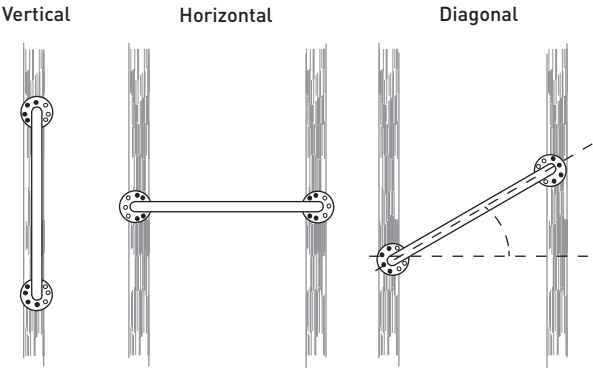

TOOLS REQUIRED:

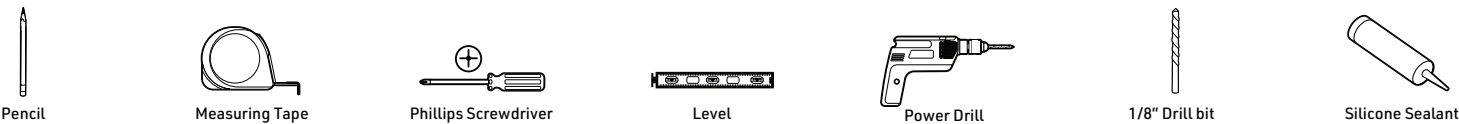

IMPORTANT: Provide blocking or backing in accordance with the requirements of the municipal building codes having jurisdiction prior to installing the wall sheathing. Secure the concealed mounting flanges to the studs, blocking or backing using three (3) screws per flange. Conceal the mounting screws by snapping flange covers over each mounting flange.
Please note: Concealed anchor devices are not provided with Taymor grab bars and must be acquired separately as an accessory.

INSTALLATION:

1 REMOVING THE ESCUTCHEON

Loosen the escutcheons (1) from the grab bar (A) base by gently tapping from the back.

A diagram showing a hand using a screwdriver to tap an escutcheon (labeled 1) off the back of a grab bar (labeled A).

2 POSITIONING THE GRAB BAR

Position the grab bar (A) on the wall where you want it installed. Use level to ensure plumb.

A diagram showing a grab bar (labeled A) being held against a wall. A level is placed against the bar to ensure it is plumb. Two screws are shown being inserted into the wall through the mounting flanges.

3 MARKING THE INSTALLATION LOCATION

With a pencil, mark the mounting hole locations.

A diagram showing a grab bar (labeled A) being held against a wall. A pencil is used to mark the locations of the mounting holes on the wall.

4 DRILLING THE MOUNTING HOLES

Remove the grab bar (A) from the wall and carefully drill pilot holes as marked.

A diagram showing a power drill being used to drill a pilot hole into a wall. The drill bit is shown entering the wall at a marked location.

5 INSTALLING THE GRAB BAR

Install the grab bar (A) with the accompanying screws (B). Ensure the screws are securely tightened.

A diagram showing a grab bar (labeled A) being installed on a wall. A screwdriver is used to tighten a screw (labeled B) into the wall through the mounting flange.

6 SECURING THE GRAB BAR


Slide the escutcheons (1) on the grab bar (A) to the mounting plates (2), line up the 3 dimples on the side of the escutcheons and the 3 protrusions on the mounting plates, and push until they snap into place.

For best practices, apply silicone in drilled holes and caulking at the escutcheon to wall joint to protect against water penetration.


A diagram showing a grab bar (labeled A) being secured to a wall. An escutcheon (labeled 1) is being pushed onto a mounting plate (labeled 2). The diagram shows the alignment of the escutcheon with the mounting plate. A note box contains the text: "NOTE: Grab bar strength is dependent on the anchors and the wall backing they are anchored into; therefore, they must be firmly secured in order to support the loads for which they are intended."

	Verticale	Horizontale	Diagonale
12 po	✓	✗	✗
16 po	✓	✓	✗
18 po	✓	✓	◁ À 27°
24 po	✓	✗	◁ À 48°
32 po	✓	✗	◁ À 60°
36 po	✓	✗	◁ À 64°

*Dans le tableau, on suppose que les poteaux muraux ont une épaisseur de 1-1/2 po et qu'ils sont espacés de 16 po, centre à centre.

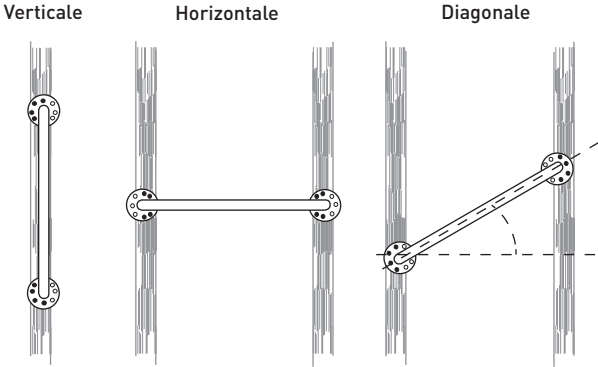

OUTILS REQUIS :

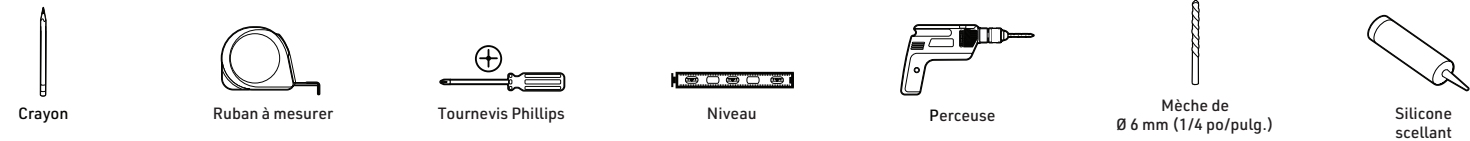

IMPORTANT : S'assurer que le renfort ou le soutien est conforme aux exigences des codes du bâtiment de la municipalité compétente avant d'installer le revêtement mural. Fixer les collerettes de montage dissimulé aux poteaux muraux et renforcer ou soutenir en utilisant trois (3) vis par collerette. Dissimuler les vis de montage en enclenchant les couvercles de collerette par-dessus chaque collerette de montage. Veuillez noter : Les dispositifs d'ancrage dissimulés ne sont pas fournis avec les barres d'appui Taymor et doivent être achetés séparément en tant qu'accessoires.

INSTALLATION :

1 RETRAIT DE L'ÉCUSSON

Desserrer les écussons (1) de la base de la barre d'appui (A) en tapant doucement par l'arrière.

2 POSITIONNEMENT DE LA BARRE D'APPUI

Positionner la barre d'appui (A) sur le mur à l'emplacement souhaité. Utiliser un niveau pour s'assurer de l'aplomb.

3 MARQUAGE DE L'EMPLACEMENT DE L'INSTALLATION

Utiliser un crayon pour marquer les trous de montage.

4 PERÇAGE DES TROUS DE MONTAGE

Retirer la barre d'appui (A) du mur et percer soigneusement les avant-trous marqués.

5 INSTALLATION DE LA BARRE D'APPUI

Installer la barre d'appui (A) avec les vis (B) qui l'accompagnent. S'assurer que les vis sont bien serrées.

6 FIXATION DE LA BARRE D'APPUI

Faire glisser les écussons (1) sur la barre d'appui (A) jusqu'aux plaques de montage (2), aligner les 3 encoches sur le côté des écussons et les 3 protubérances sur les plaques de montage, et pousser jusqu'à enclenchement.

Pour de meilleurs résultats, appliquer du silicone dans les trous percés et du calfeutrant au niveau des écussons jusqu'au joint du mur pour empêcher l'eau de pénétrer.

REMARQUE : La résistance de la barre d'appui dépend des ancrages et du support mural dans lequel elles sont ancrées; elles doivent donc être solidement fixées afin de supporter les charges auxquelles elles sont destinées.