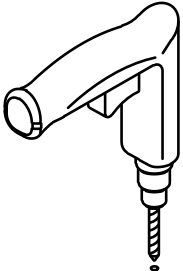
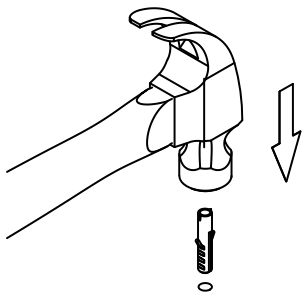


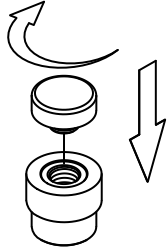



1 	• Drill pilot hole in desired position for anchor placement.
2 	• Gently hammer the plastic anchor into the pilot hole until it sits flush with the floor.
3 	• Unscrew metal cap off of Floor Stop by twisting counter clockwise.
4 	• Align Floor Stop base with anchor and use a screwdriver to drive the screw into the anchor.
5 	• Once base is securely screwed down, tighten the metal cap back on to Floor Stop base by twisting clockwise.
6 	• Final result should be as shown in drawing.